



INSTALLATION OF THE PHONO STAGE (IN50-80-100 + PR100-200)

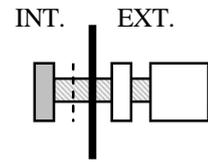



1- SCREW THE GROUND MATERIAL ON THE CHASSIS

OLD MODELS :

1- CUT THE 3 STRAPS ON THE BOARD (-//)-

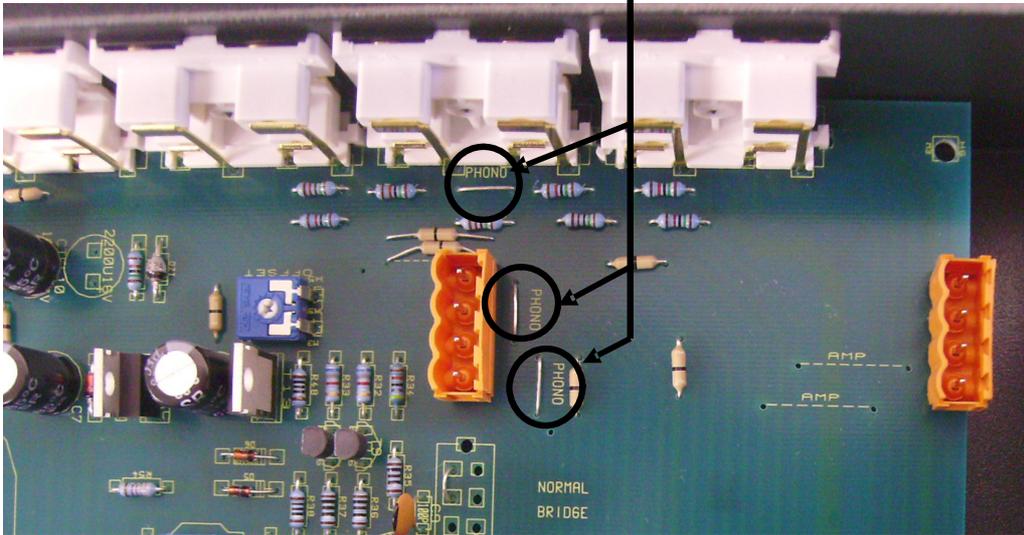

NEW MODELS : (SE line)

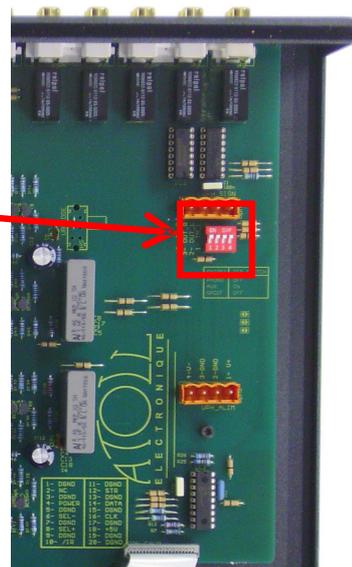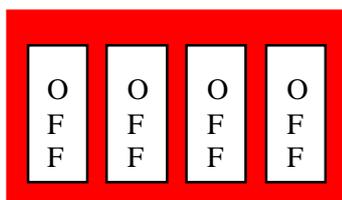


3- PLACE THE PHONO STAGE IN THE ORANGE CONNECTORS ON THE MAIN BOARD. (ONLY ONE WAY POSSIBLE)



4- REMIND YOU THAT THE PHONO INPUT IS **AUX** INPUT.

INSTALLATION OF THE PHONO STAGE (IN200 + PR300)

1- SCREW THE GROUND MATERIAL ON THE CHASSIS

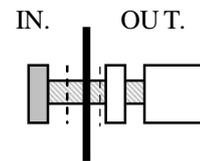

2- PLACE 4 DIL SWITCHES AS SHOWN BELOW :

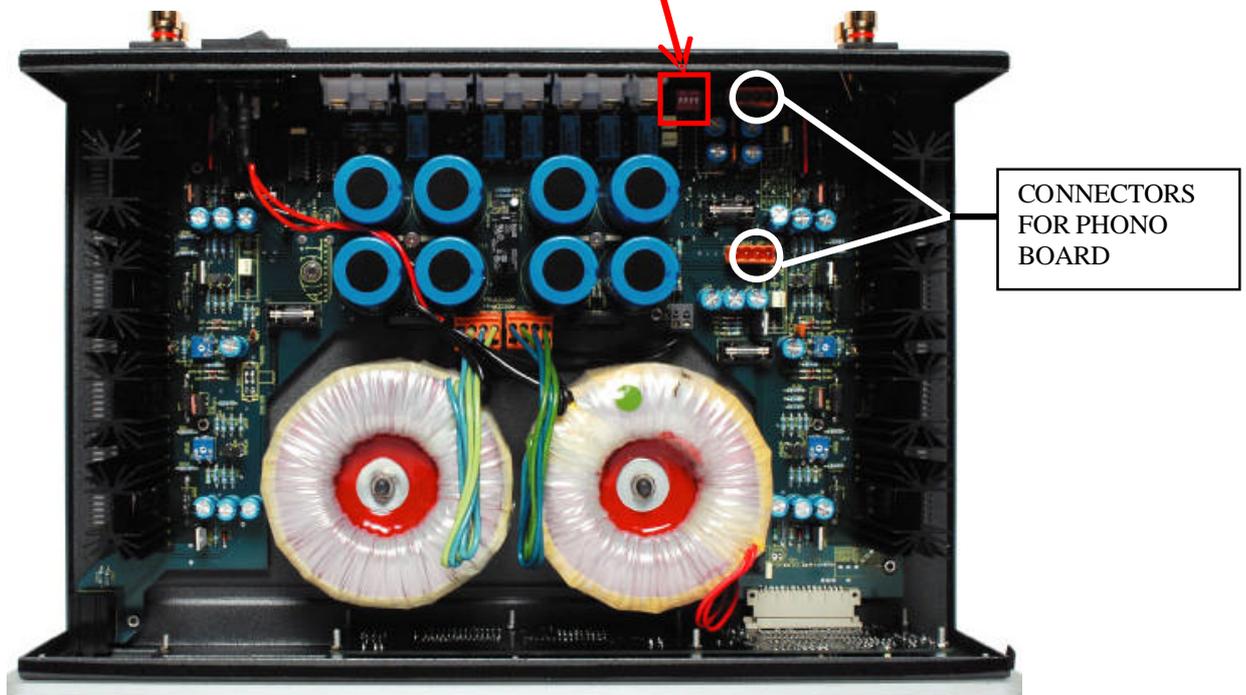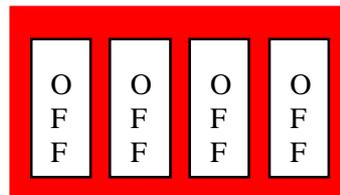

3- PLACE THE PHONO STAGE ON THE ORANGE CONNECTORS OF THE MAIN BOARD. (ONLY ONE WAY POSSIBLE)

4- REMIND YOU THAT THE PHONO INPUT IS AUX INPUT. (PHONO ON DISPLAY)